 
 
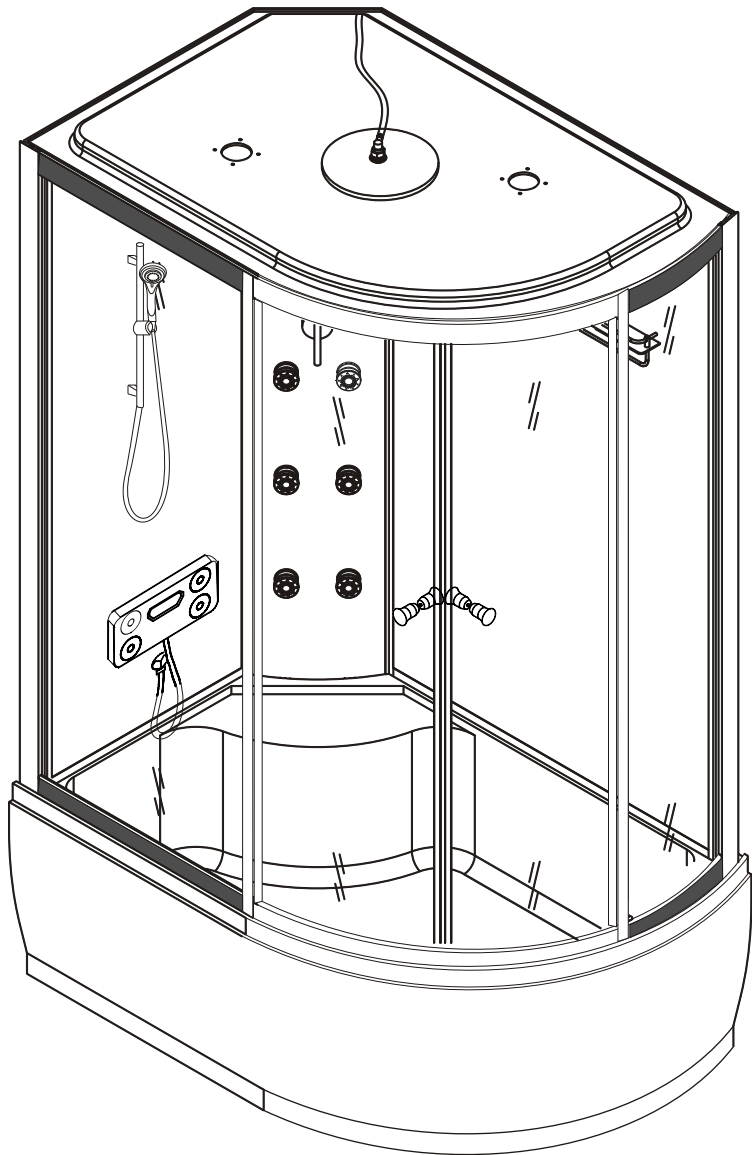 
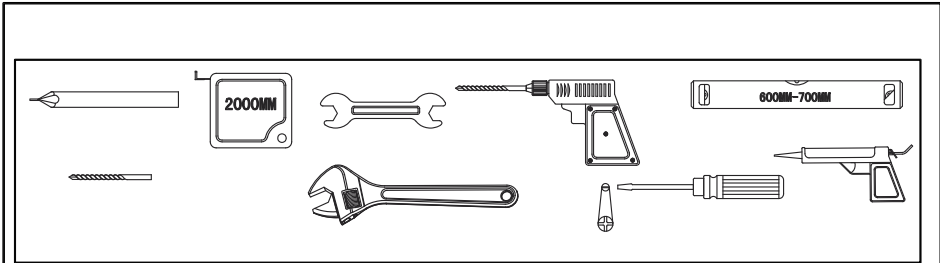 
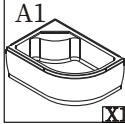 
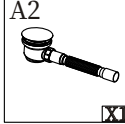 
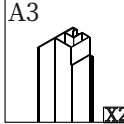 
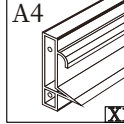 
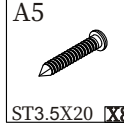 
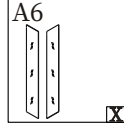 
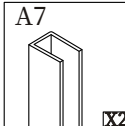 
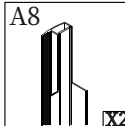 
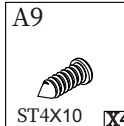 
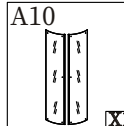 
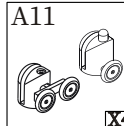 
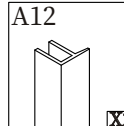 
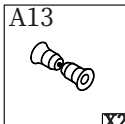 
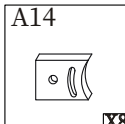 
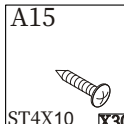 
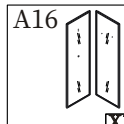 
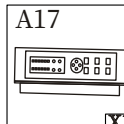 
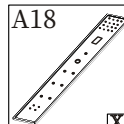 
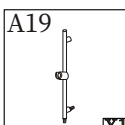 
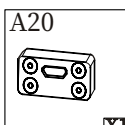 
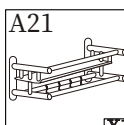 
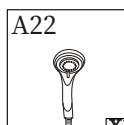 
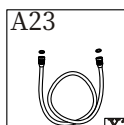 
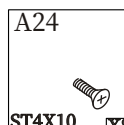 
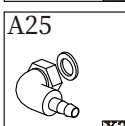 
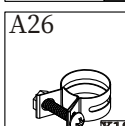 
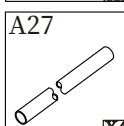 
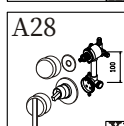 
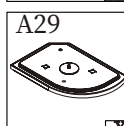 
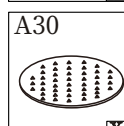 
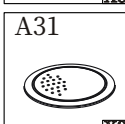 
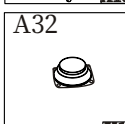 
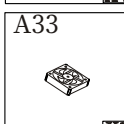 
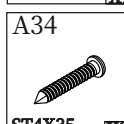 
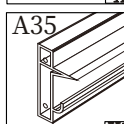 
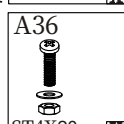 
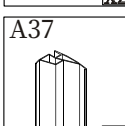 
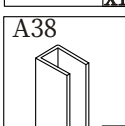 
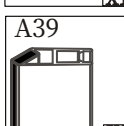 




Manual User




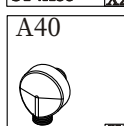


AS-109R



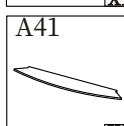


A1  X1	A2  X1	A3  X2	A4  X1	A5  ST3.5X20 X8	A6  X1
A7  X2	A8  X2	A9  ST4X10 X4	A10  X1	A11  X4	A12  X2
A13  X2	A14  X8	A15  ST4X10 X30	A16  X1	A17  X1	A18  X1
A19  X1	A20  X1	A21  X1	A22  X1	A23  X2	A24  ST4X10 X8
A25  X3	A26  X18	A27  X4	A28  X1	A29  X1	A30  X1
A31  X2	A32  X1	A33  X1	A34  ST4X35 X2	A35  X1	A36  ST4X20 X1
A37  X1	A38  X2	A39  X2	A40  X1	A41  X2	







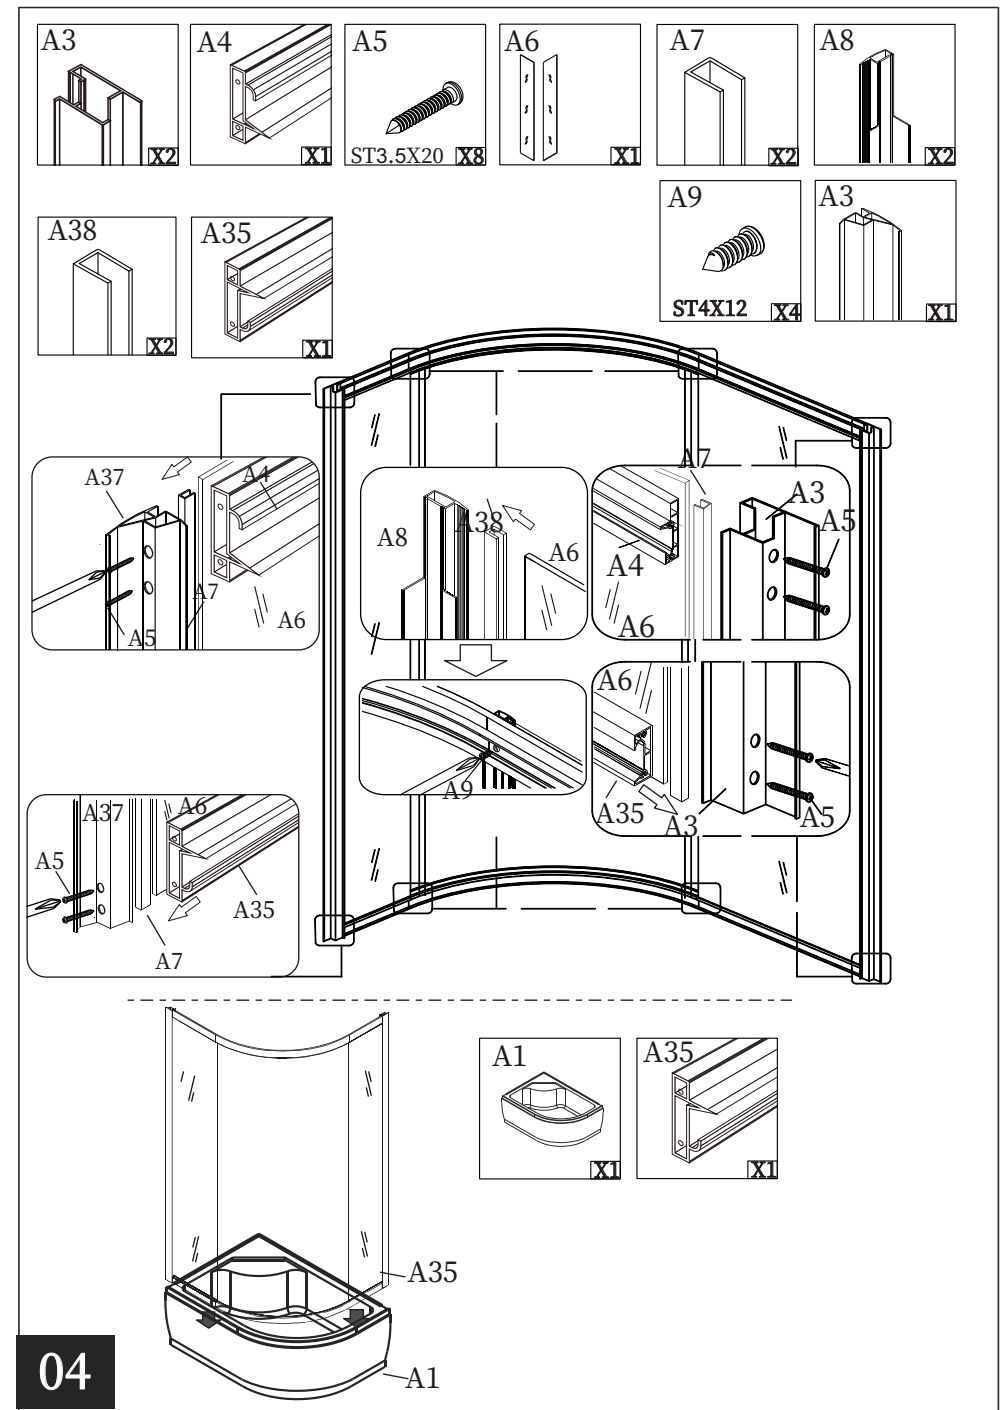 
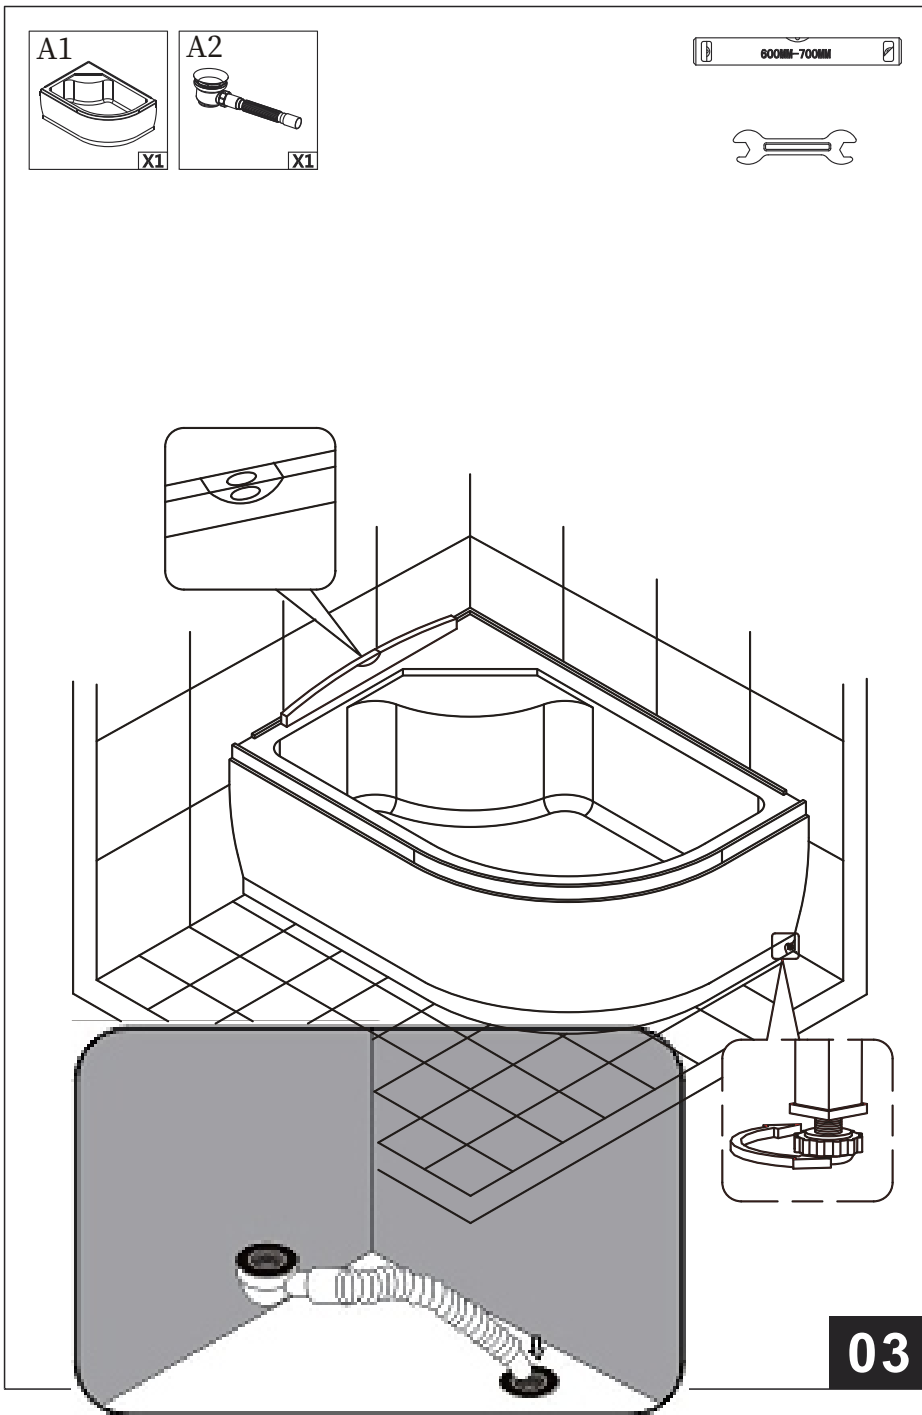 


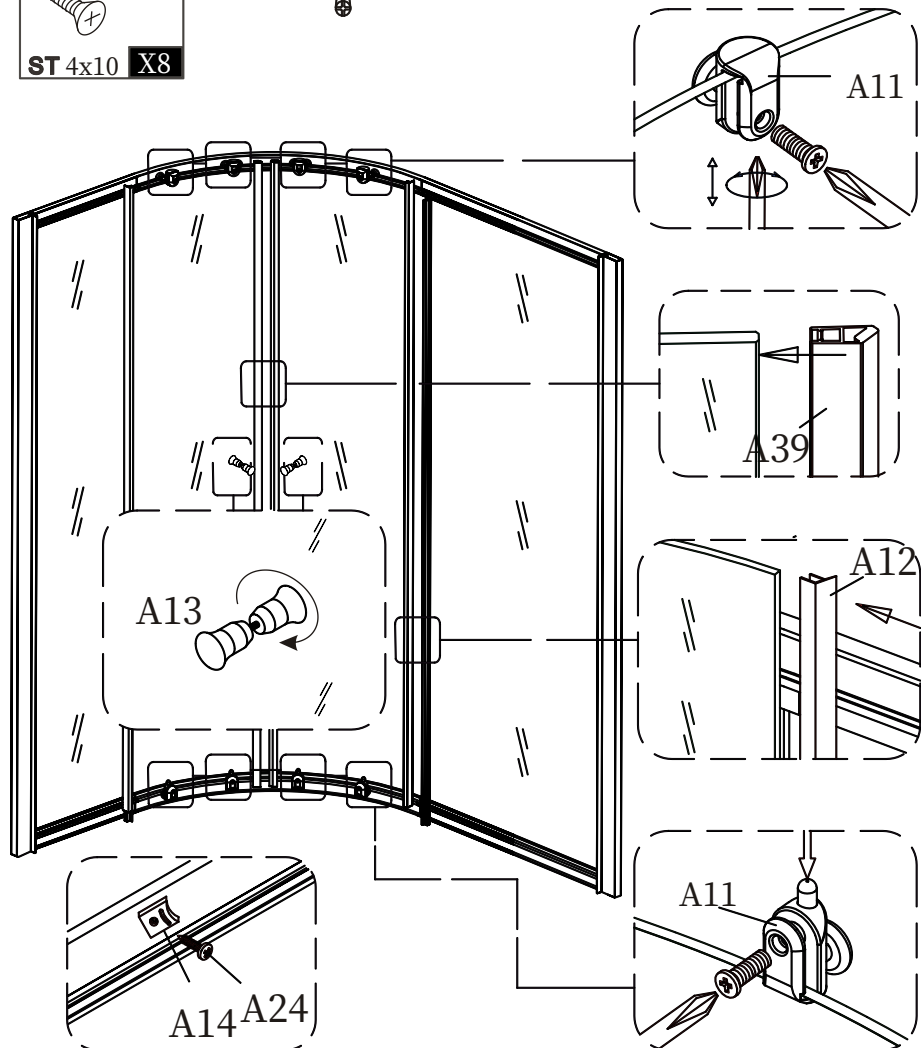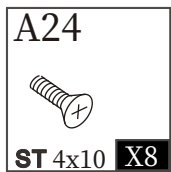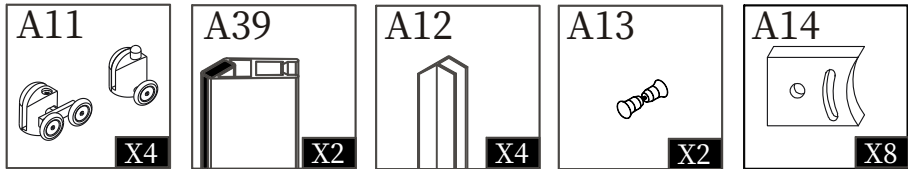    










05

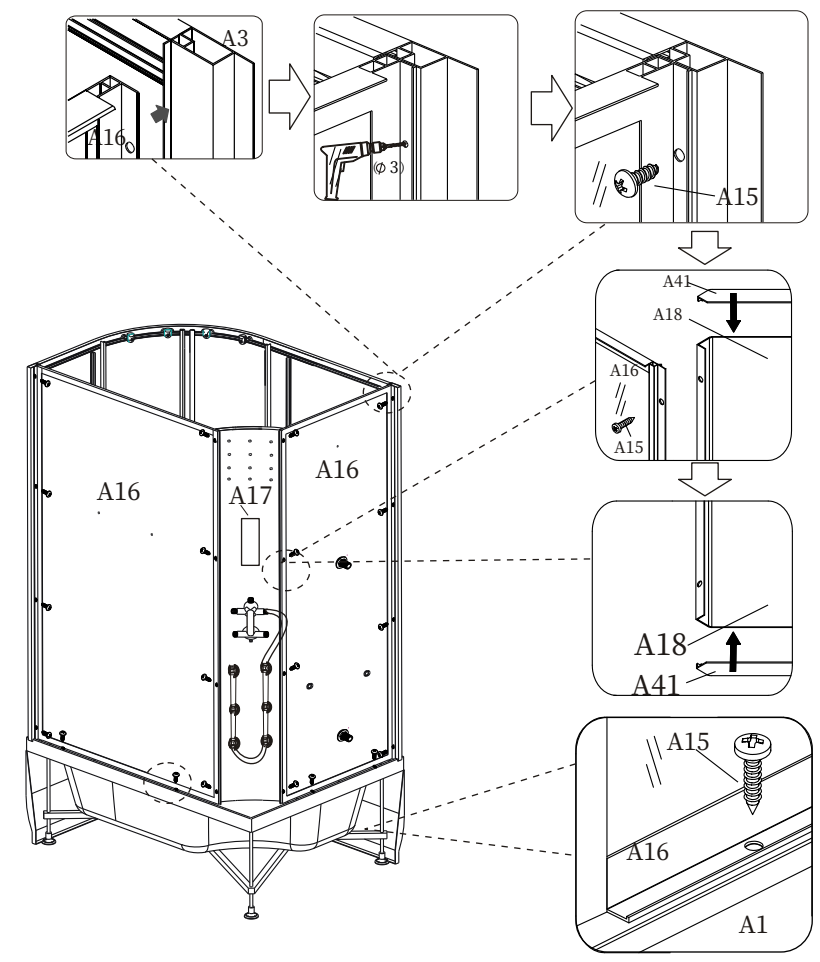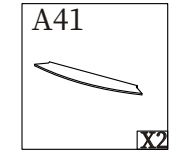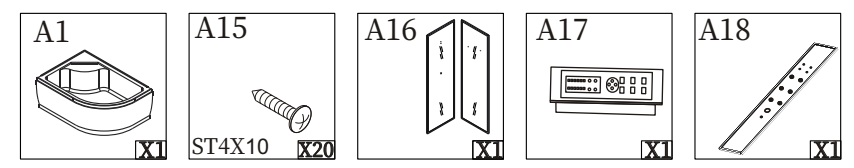   

06

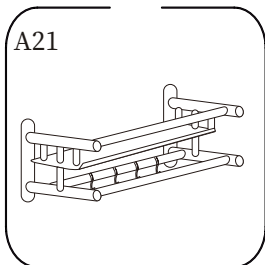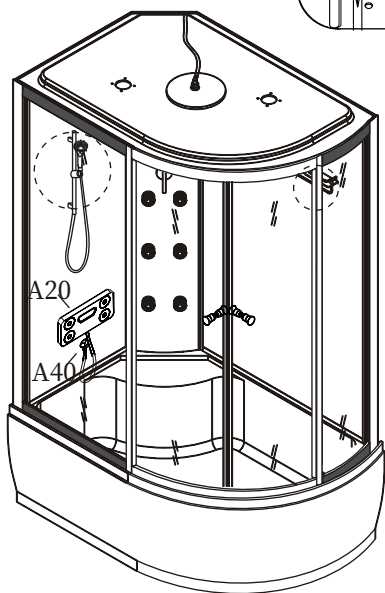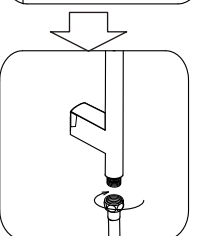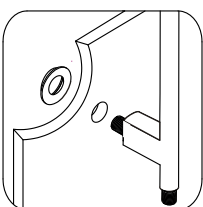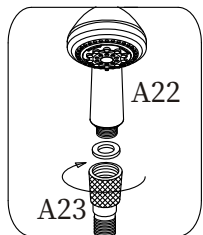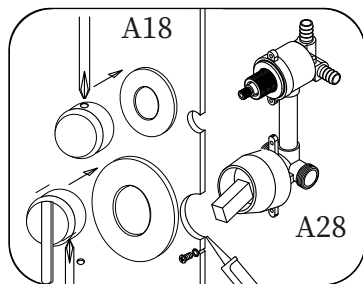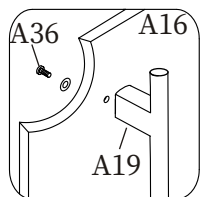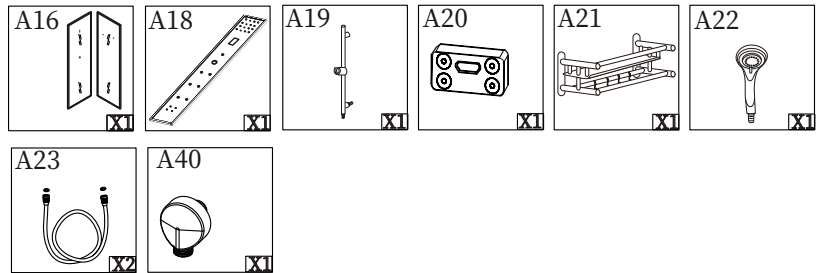        

07

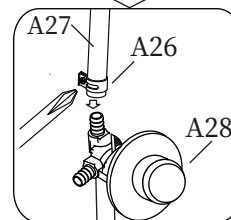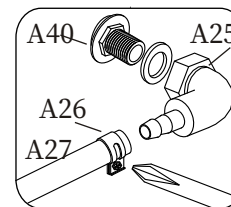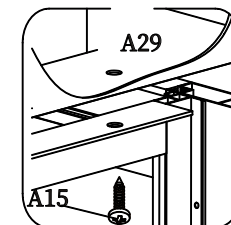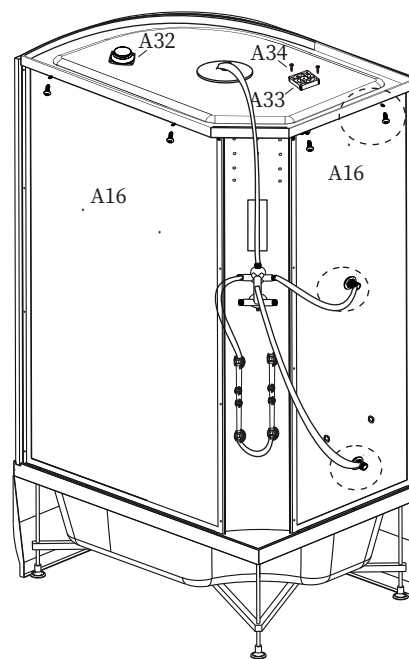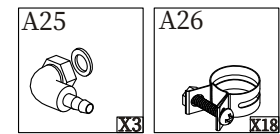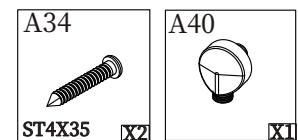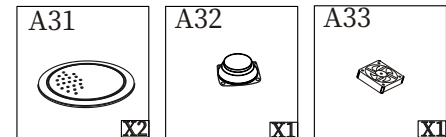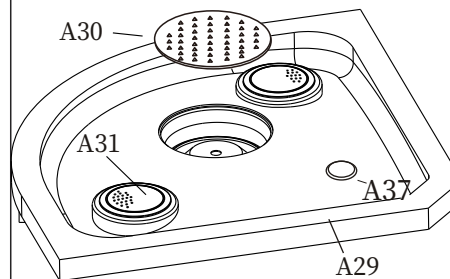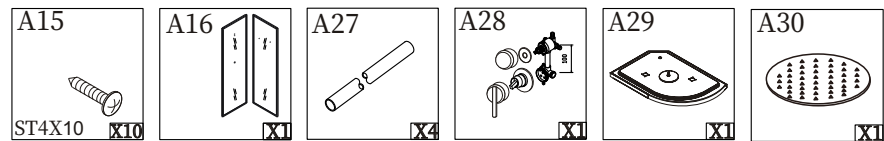         

08