

7 : Trouble shootings

Troble	Cause	Remedy
No power	1.Electric power don't connect well,leak swtich is cut off.	Access to power
	2.Fuse wire is broken,switch of control panel is failure.	Maintain or replace
	3.GFCI is out of work	Check GFCI
No head shower	1.water pressure is abnormal	Check water pressure
	2.Cold and hot water switch is closed.	Turn on the cold and hot water switch
	3.chocking nozzle	Clean
Water pipe leakage	1.Seal ring damaged	Replace seal ring
	2.Tie in dont connect well	Connect it again
No radio	1.Connecting wire is cut	Make connection
	2.Loudspeaker is broken	Replace a new one
Phone unusable	1.Telephone wire dont connect well	To make contact telephone line
	2.Control panel is broken	Maintain or replace
No light	1. Bulb is broken,ballast is broken	Replace
	2.Break of ballast	To make contact
	3.Control panel is broken	Maintain or replace
No exhaust	1.Fan is broken	Replace
	2.Tie-in is not connect well	To make contact
	3.Control panel is broken	Maintain or replace

If complete shower room cant work normally, please check it as compare above then obstacle avoidance.

If customers cant make sure the cause of obstacle or lack of ability mantianance.Please contact distributer.

Complete Shower Room Installation & Operation Manual

9010B

SIZE:800X800X2100mm



Cautions in Installation and Using

Thanks for selecting our shower room series. To guarantee safe and normal operation as well as prolong service lifetime. Pls read Instruction carefully before installation.

Note: We are dedicated to improving products quality, find something new in what is old, we would inform if there is difference in the Instruction until further notice. Any discomfort, we ask your pardon.

Directory

1.Tool contents	-----	3
2.Accessory list	-----	4-6
3.Pipe and drain installation drawing	-----	7
4.Installation Procedure	-----	8-17
5.Notes	-----	18
6.Delivery and storage notice	-----	18
7.Trouble shootings	-----	19


5 : Notes

1. It is unadvisable to take a shower after drunk.
2. It is unadvisable to have a shower immediately after acute sports.
3. Please avoid bath or shower in morning.
4. Keep the temperature of dressing room near to the bathroomS
5. If you feel uncomfortable while having a shower, you should go out of the shower room as soon as possible.
6. The time of shower is advisable to be between 15 minutes and 20 minutes, no longer.
7. Drink water to supplement moisture after shower or bathing.
8. People who suffer from heart disease, high blood pressure, diabetes or who feel unwell or pregnant woman are unadvisable to have bathing, massage or shower.


6 : Delivery and storage notice

1. It is prohibited to store organic solvent together, such as formic acid and methanol.
2. Handle with care if it need transport. Heavy stress, mechanical impact and sharp pounding is prohibited.
3. It should keep it dry and airy and make sure there is no etchant gas.

4. Installation Procedure

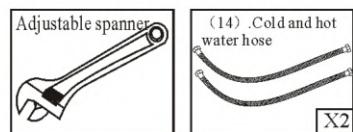

13. Connect cold and hot water with installed shower room by adjustable spanner, then plug in.

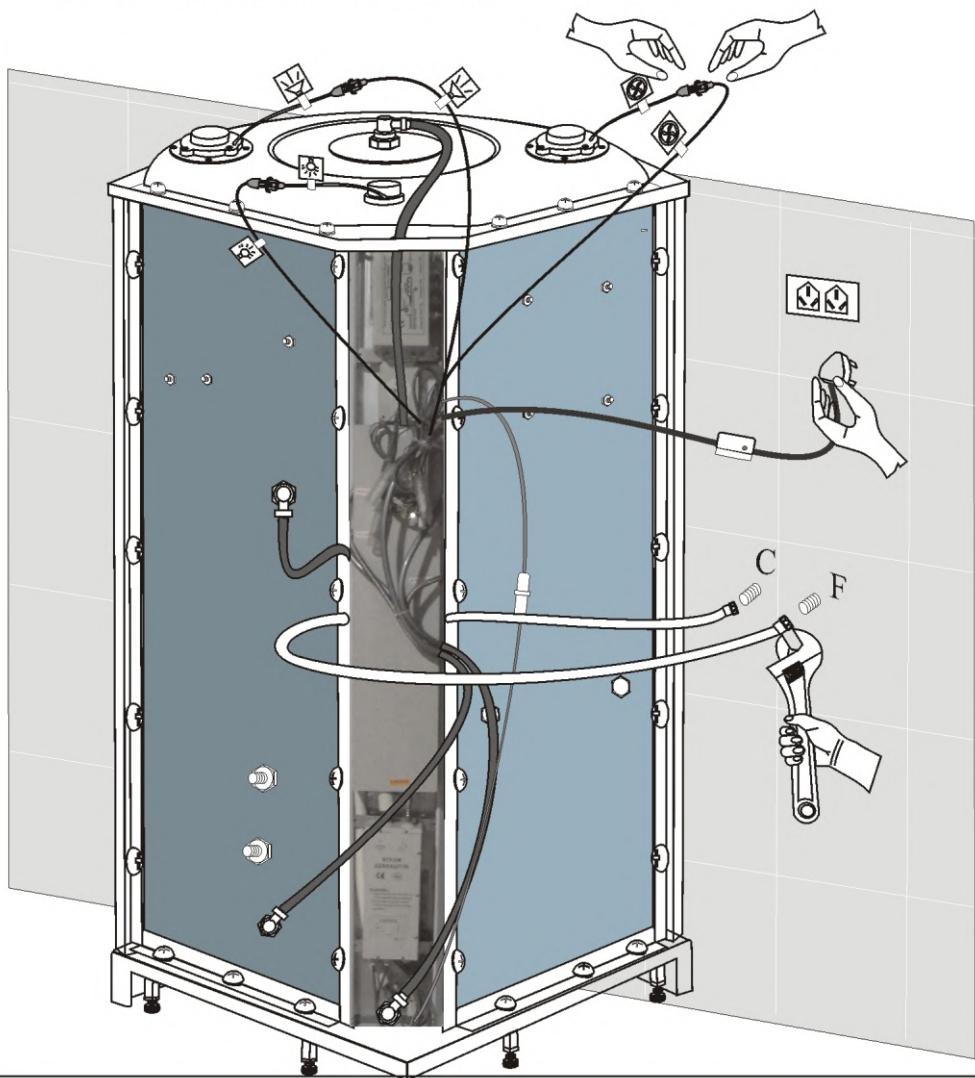




(17)

1. self-provide tool

Name	Tool
Track level bar	
Tape measure	
Ajustable spanner	
Rubber hammer	
Phillips screwdriver	
Scissors	
Glass cement	
electric drill	
3mm aiguille	
6mm aiguille	
tap drill	


(2)

2.Partial accessory list


Item	Name	Accessory	Quantity
1	(1.1)Tub		1
	(1.2)Middle Backboard		1
	(1.3)Roof		1
2	(2.1)Backboard glass		2
	(2.2)Backboard glass		2
	(2.3)Arch fixed door glass		2
	(2.4)Arch flexible door glass		2
3	(3.1)Side upright column		2
	(3.2)Upper rail		2
	(3.3)Bottom rail		2
	Glass platen		4
4	(4)eccentric wheel		8
5	(5)Knob		2
6	(6)Top shower		1

(3)

4.Installation Procedure

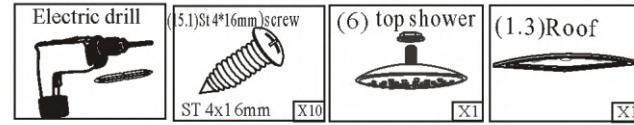


12.)Fix top cover with glass room by (15.1)ST4*16 screws. Connect all of pipes and wires as picture.

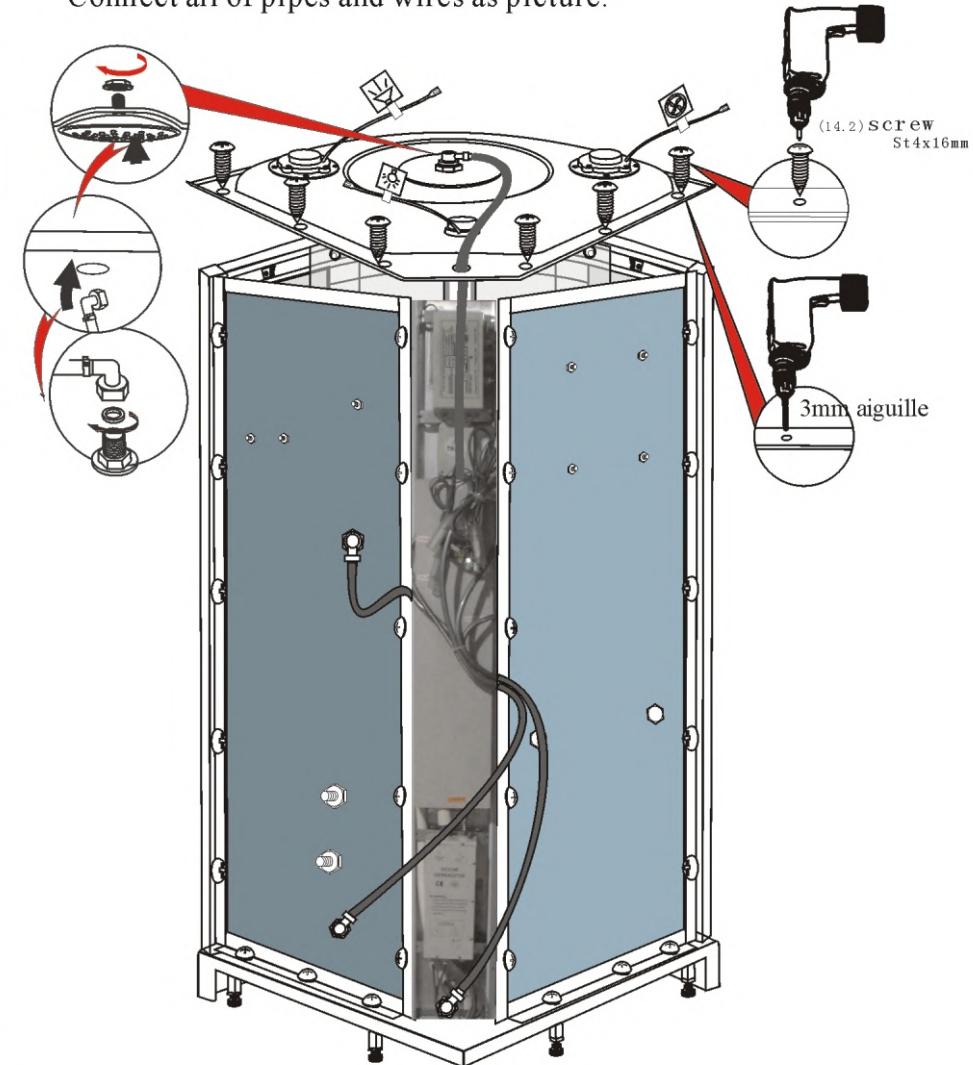


(16)

4, Installation Procedure

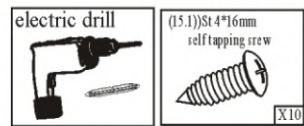

11.) Put the back board and glass room on the tub, connect them and fix them by screw (15.1)

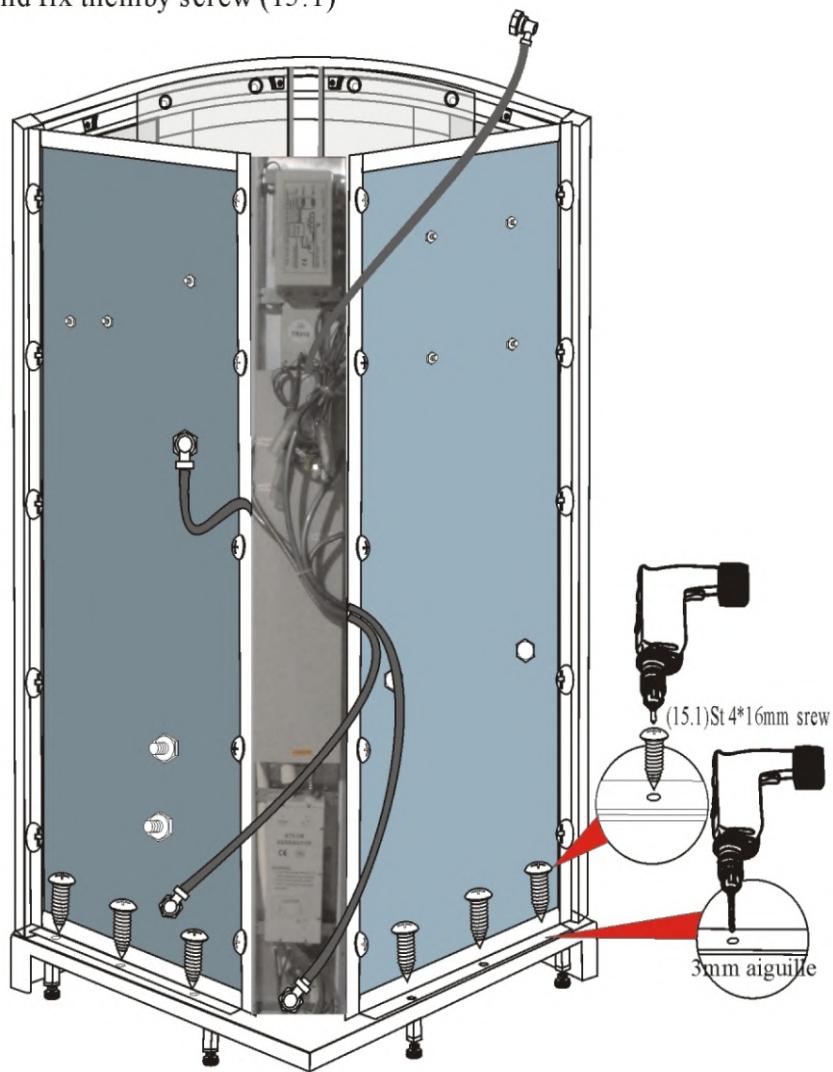

(15)

2. Partial accessory list

Item	Name	Accessory	Quantity
7	(7.1)hand shower		1
7	(7.2)hand shower tube		1
8	(8)Lifting rod		1
9	(9)Foot massager		1
10	(10)Soap container		1
11	(11)Hand shower		1
12	(12)Cold and hot water hose		2
13	(13)Glass positioning fixture		8
14	(14.1)Magnetic strip		2
14	(14.2)Waterproof belt		2
14	(14.3)U style thong		12
15	(15.1)St 4*16mm self tapping screw		28
15	(15.2)St 4*10mm self tapping screw		16

(4)

3. Pipe and drain installation drawing

C=Cold water inlet
H=Hot water inlet
D=Drain




(5)

4, Installation Procedure




9:)Connect back board and glass room by screw (15.1), fit the pipes.

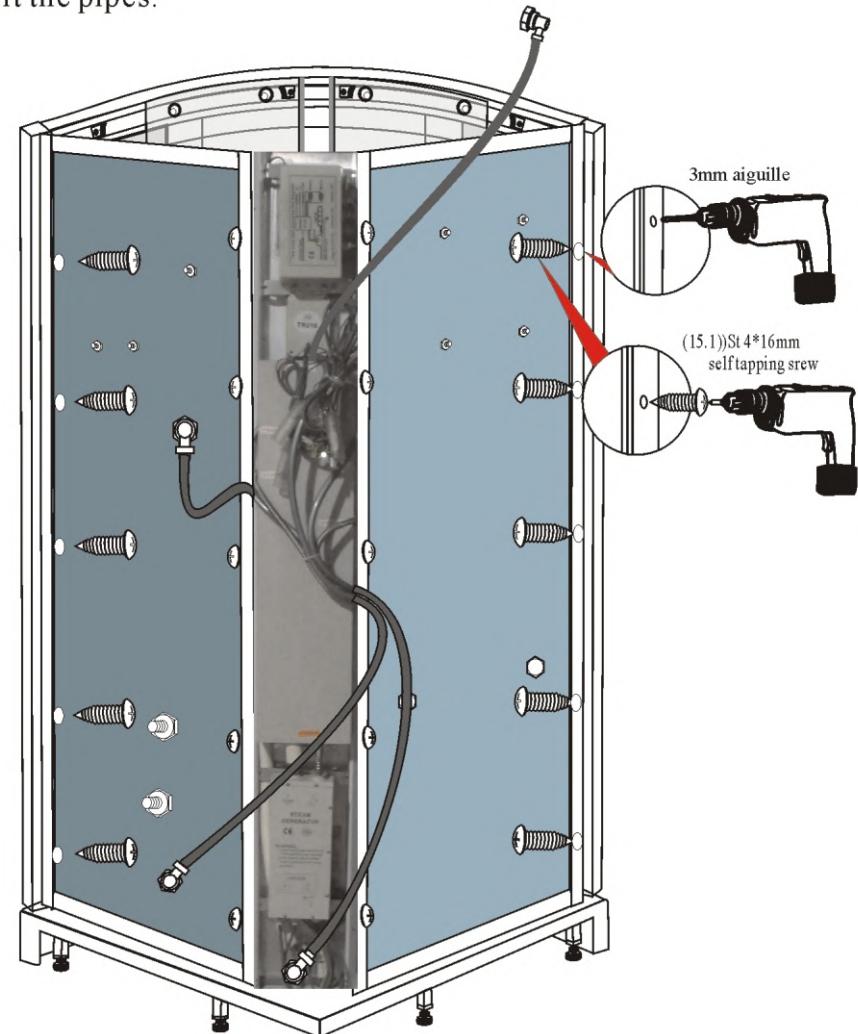


(14)

4, Installation Procedure

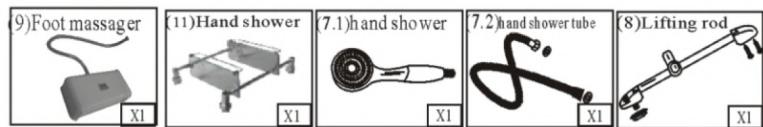


8.) Fit the soap container, handle shower, and glass holder.

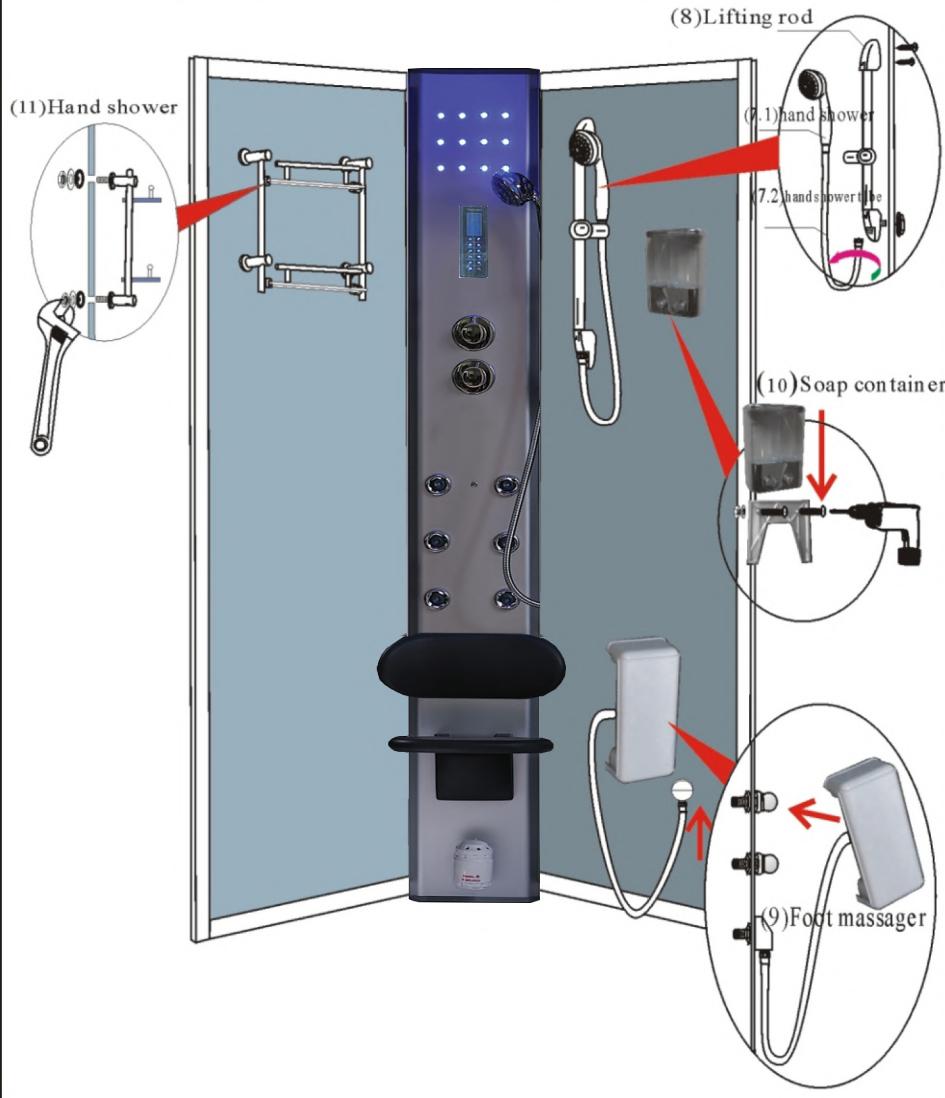


(13)

4, Installation Procedure

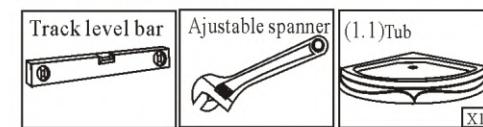


1.) Put track level bar on the tub, and adjust foot's screw by adjustable spanner, and keep it to the leveling

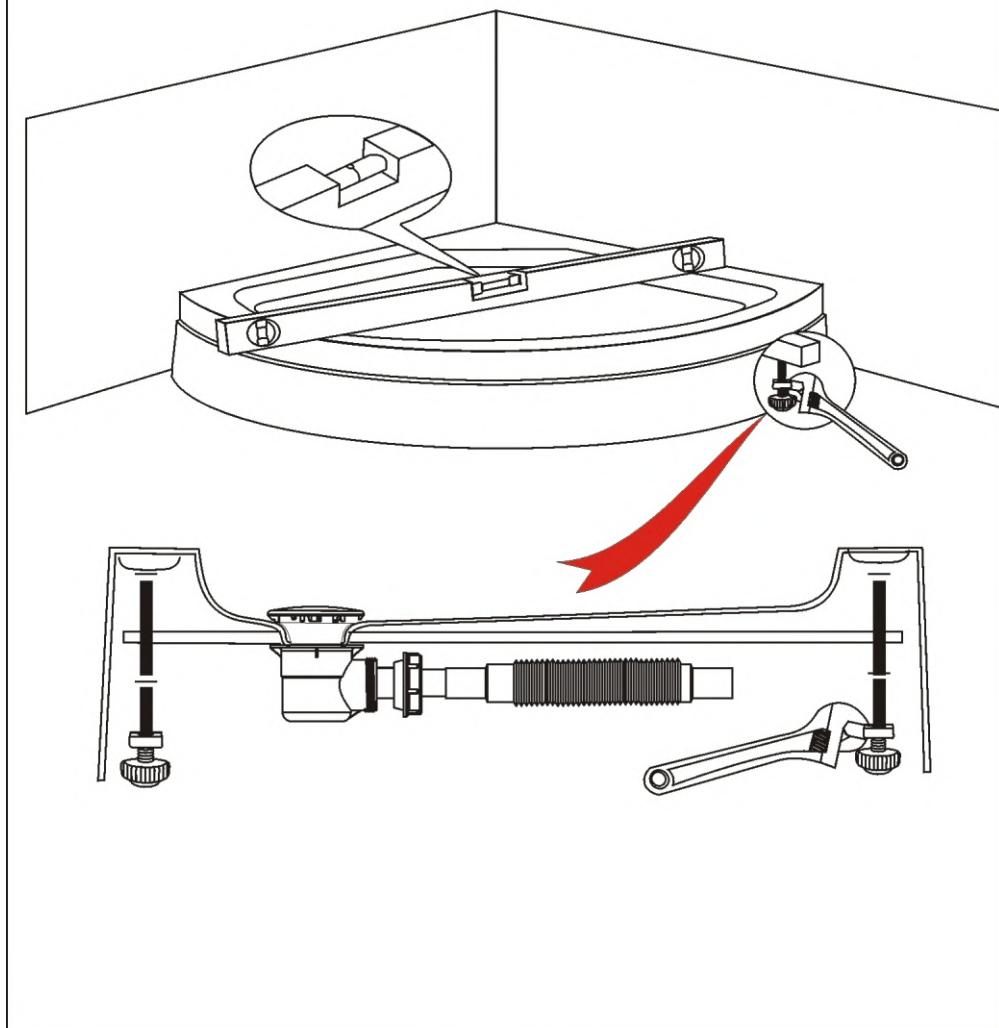


(6)

4, Installation Procedure

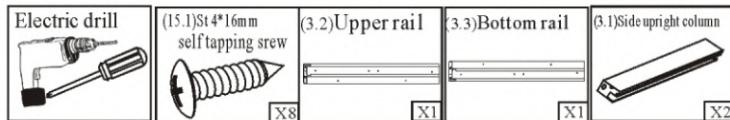


2.)Build up the frame. Make sure the rails and upright aluminums are suitable. And find the difference between up rail and down rail.

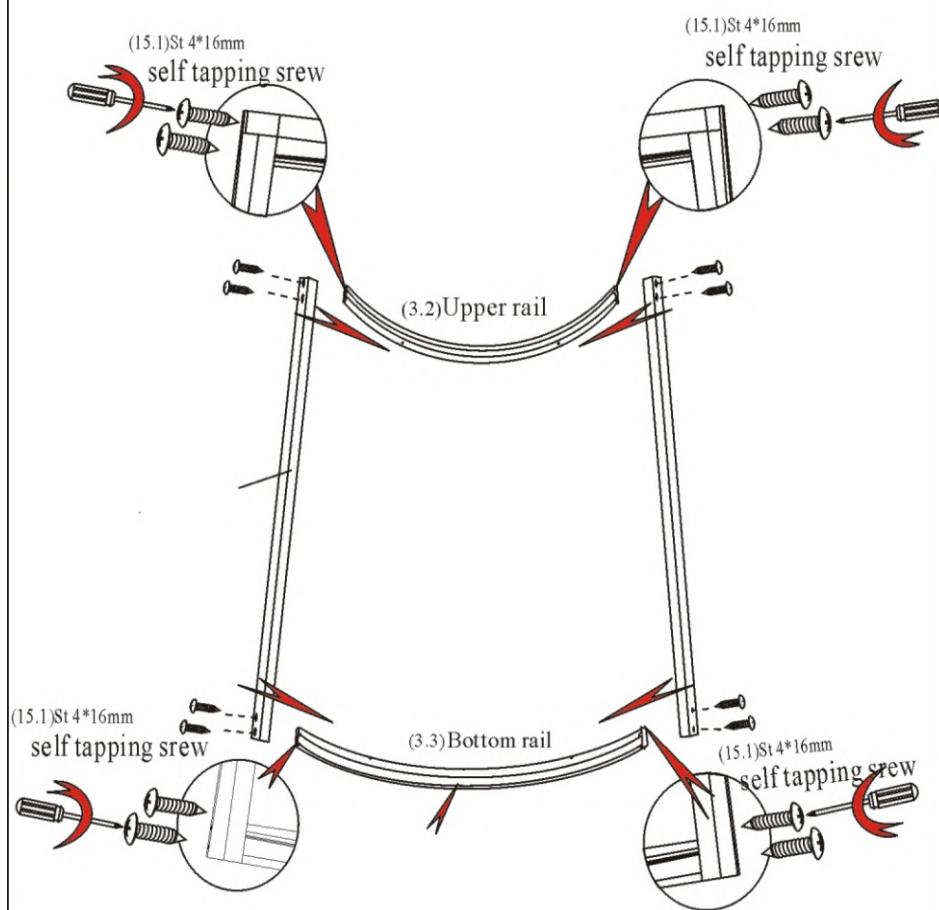


(7)

4, Installation Procedure

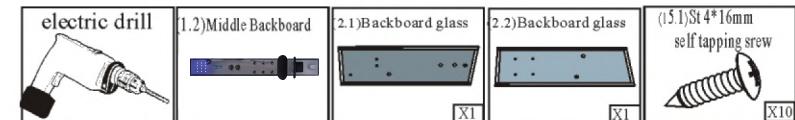


7.)Connect back board and glass room by screw (15.1), fit the pipes.

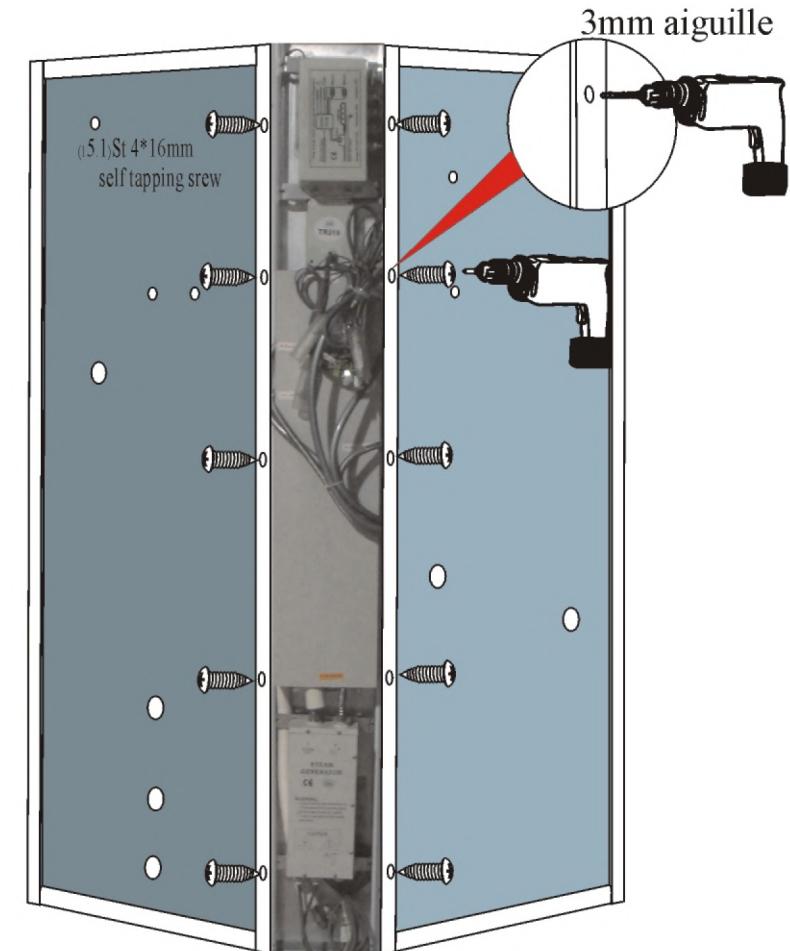


(12)

4, Installation Procedure




6.) Fit the handle into flexible door, fix rubber position(13) by screws(15.2)Fit the magestic seal and waterproof belt.

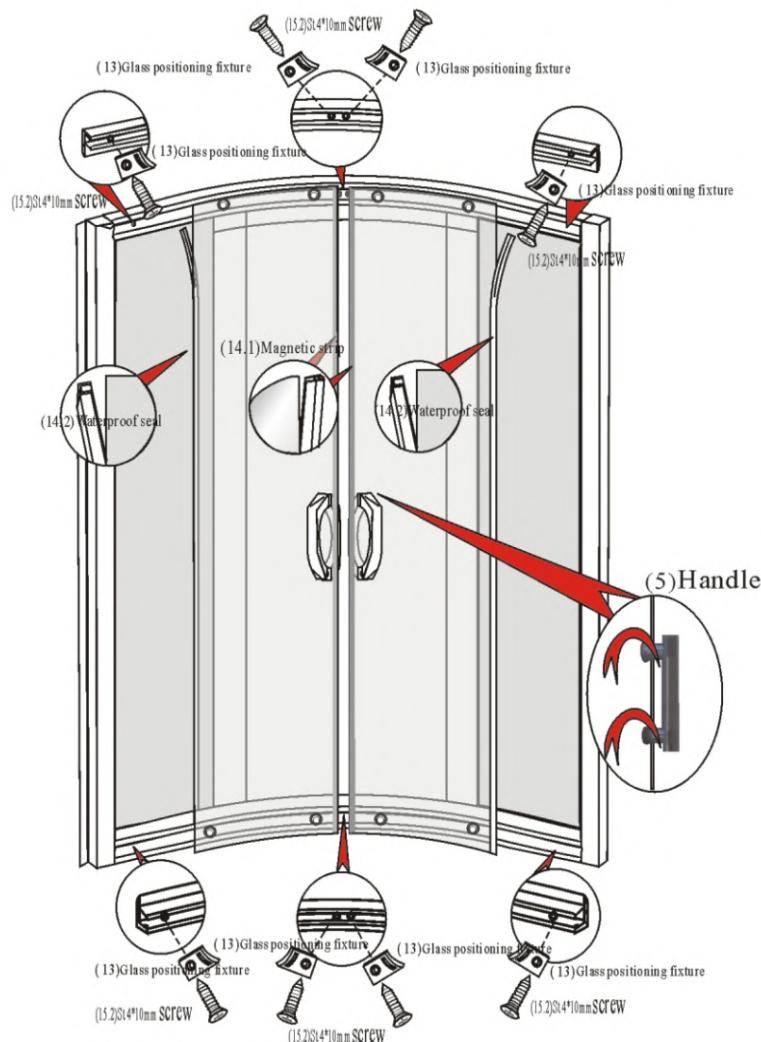


(11)

4, Installation Procedure




3.) Fit the fixed glass into the frame,after fitting the rubber seal into glass one side, and then knock the glass carefully by hammer.

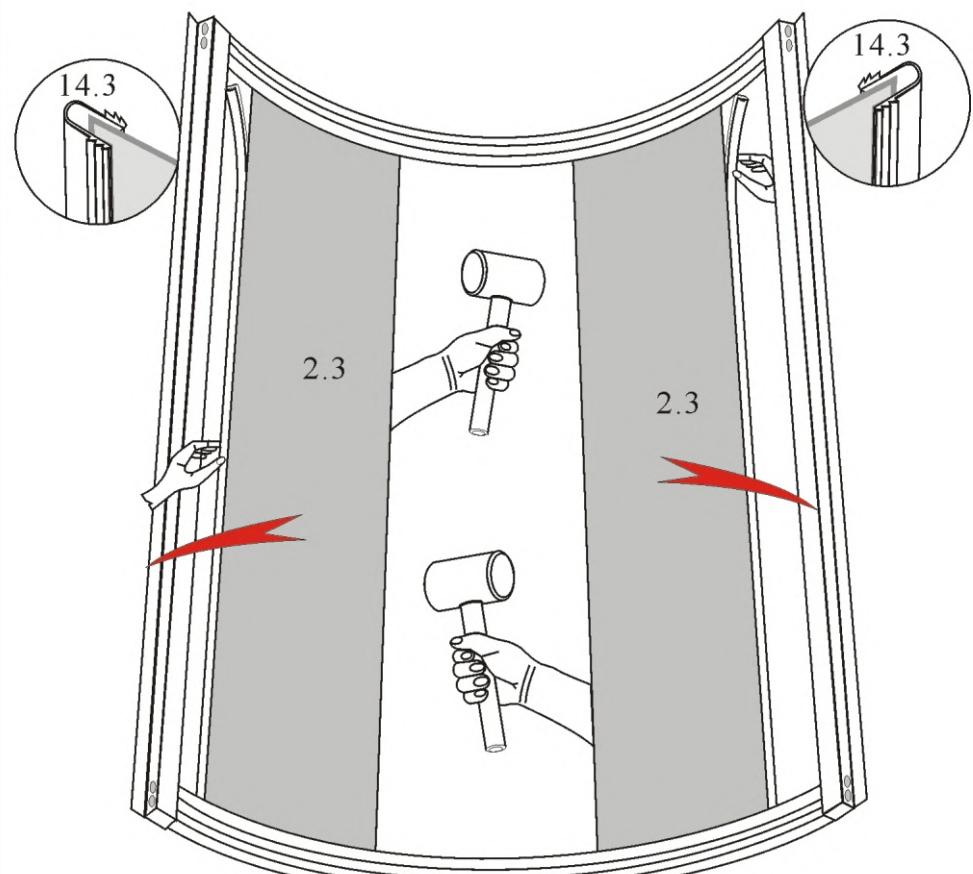


(8)

4, Installation Procedure

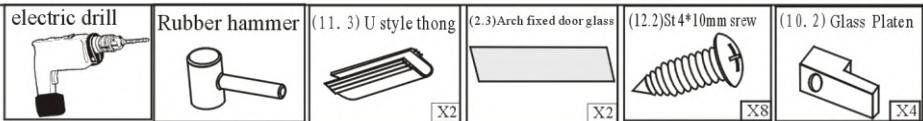


4 :) Fit the fixed glass into the frame, after fitting the rubber seal into glass one side, and then knock the glass carefully by hammer.

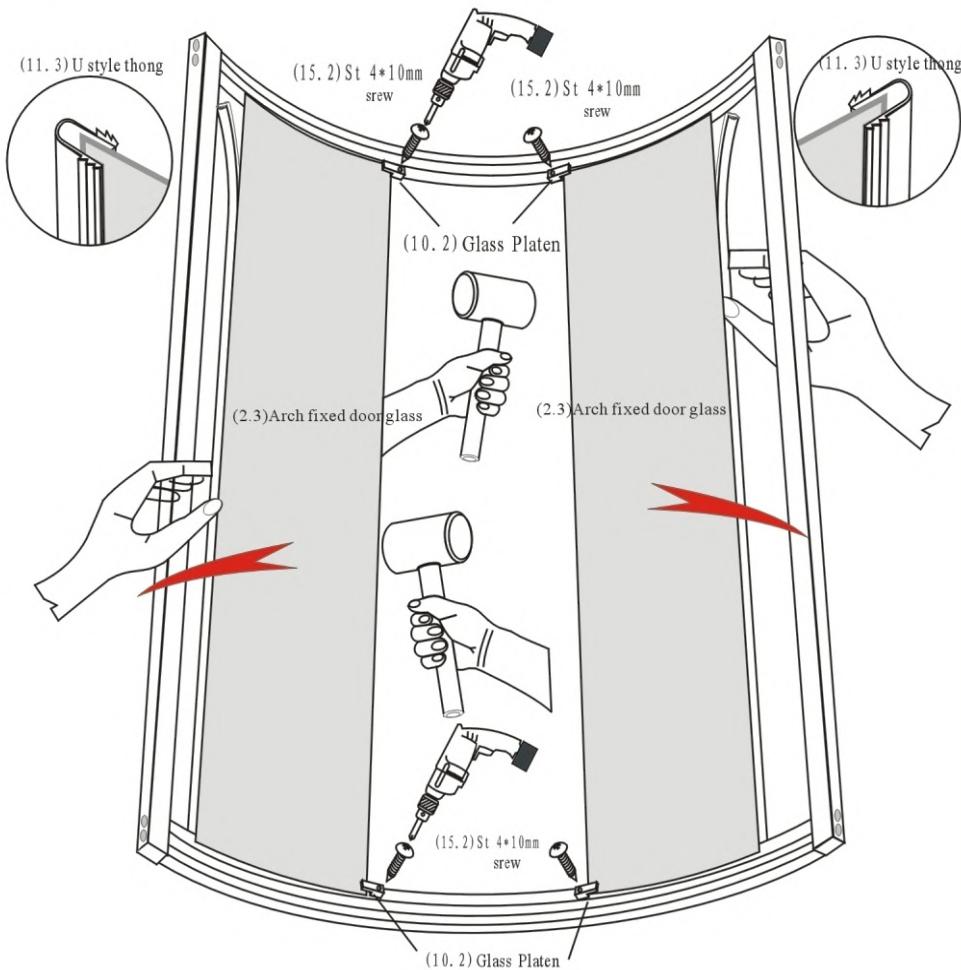


(9)

4, Installation Procedure

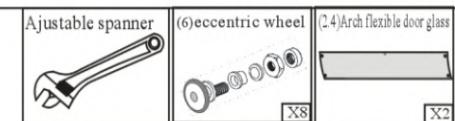

5 :) Put the roller into glass door holes, and adjust the roller screw, then hang the door into up rails. Then fix all of roller, to make sure the door move smoothly.

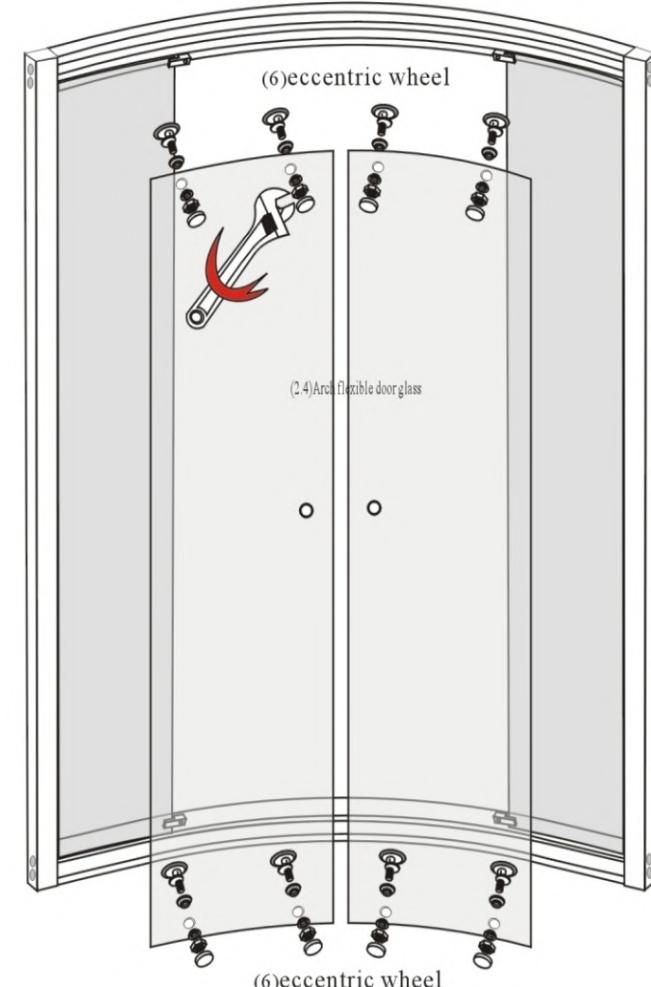

(10)