


Shower Room Installation Instruction

SC203

1100*1100*2150mm




Put the base at the right place, adjust the feet and tighten the screws.

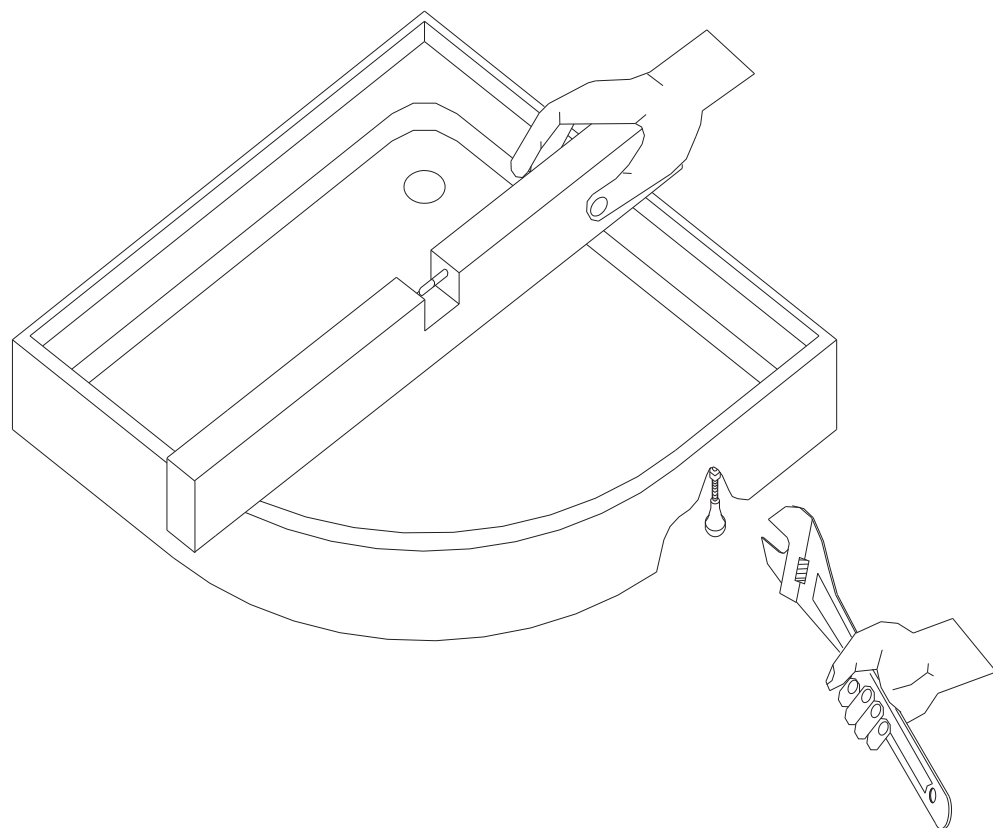


(1)

Connection the all wires installed on control panel with all functions accordingly.

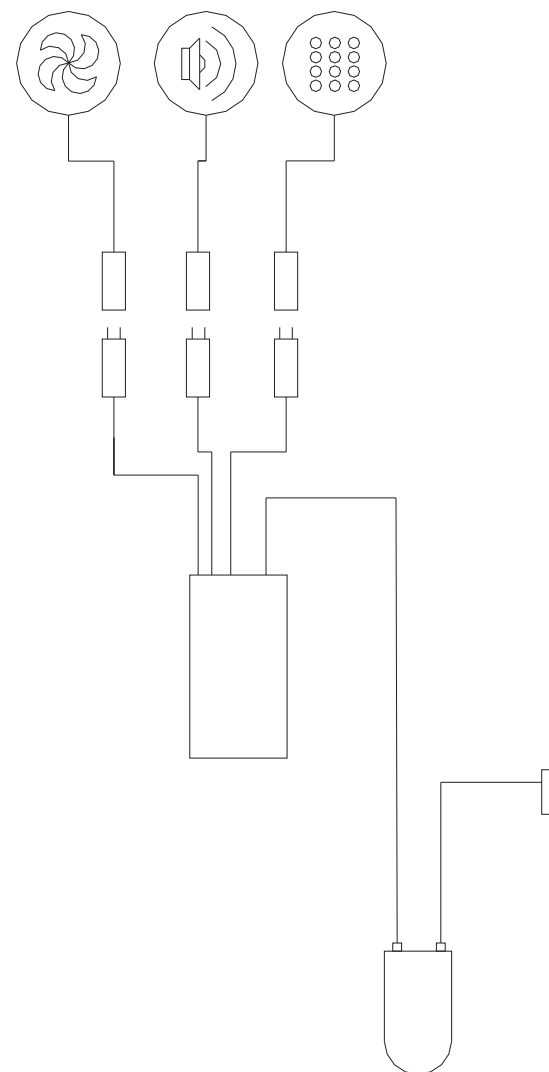


(10)

Connection the hot/cold hose with the “C” and “H” port. and then connection the hose to the handle shower, top shower, back jets etc accordingly.

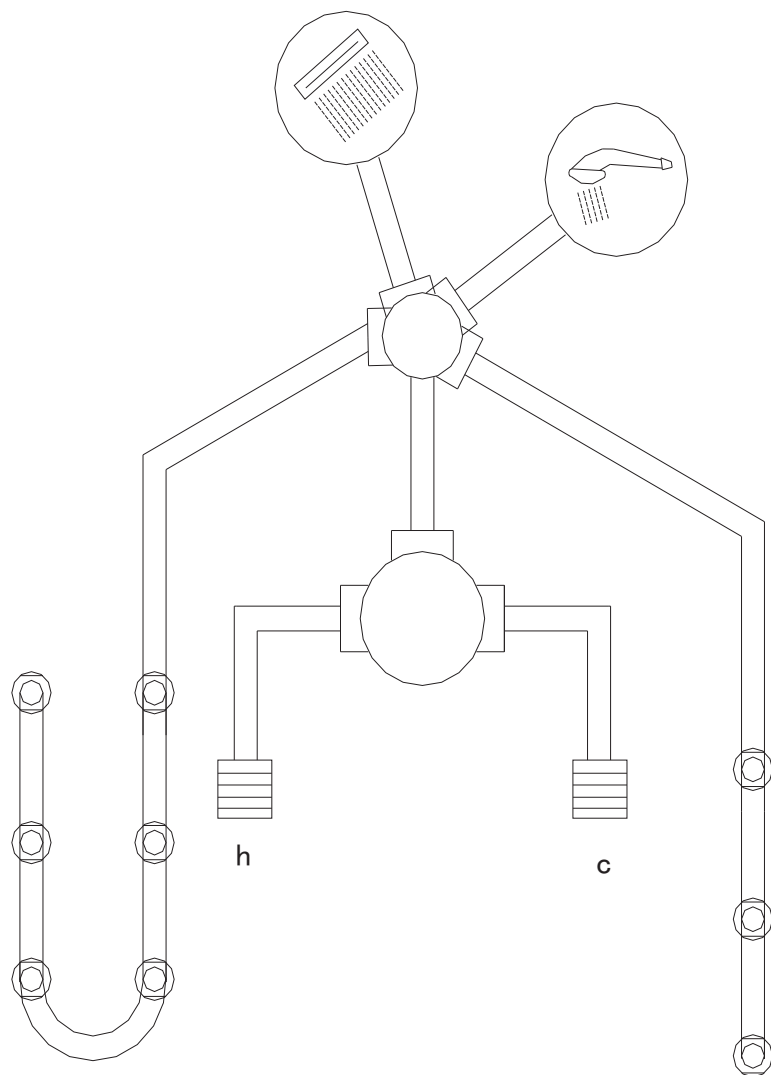


(9)

Connection the bend rail and aluminium profile with the screws (4*60).

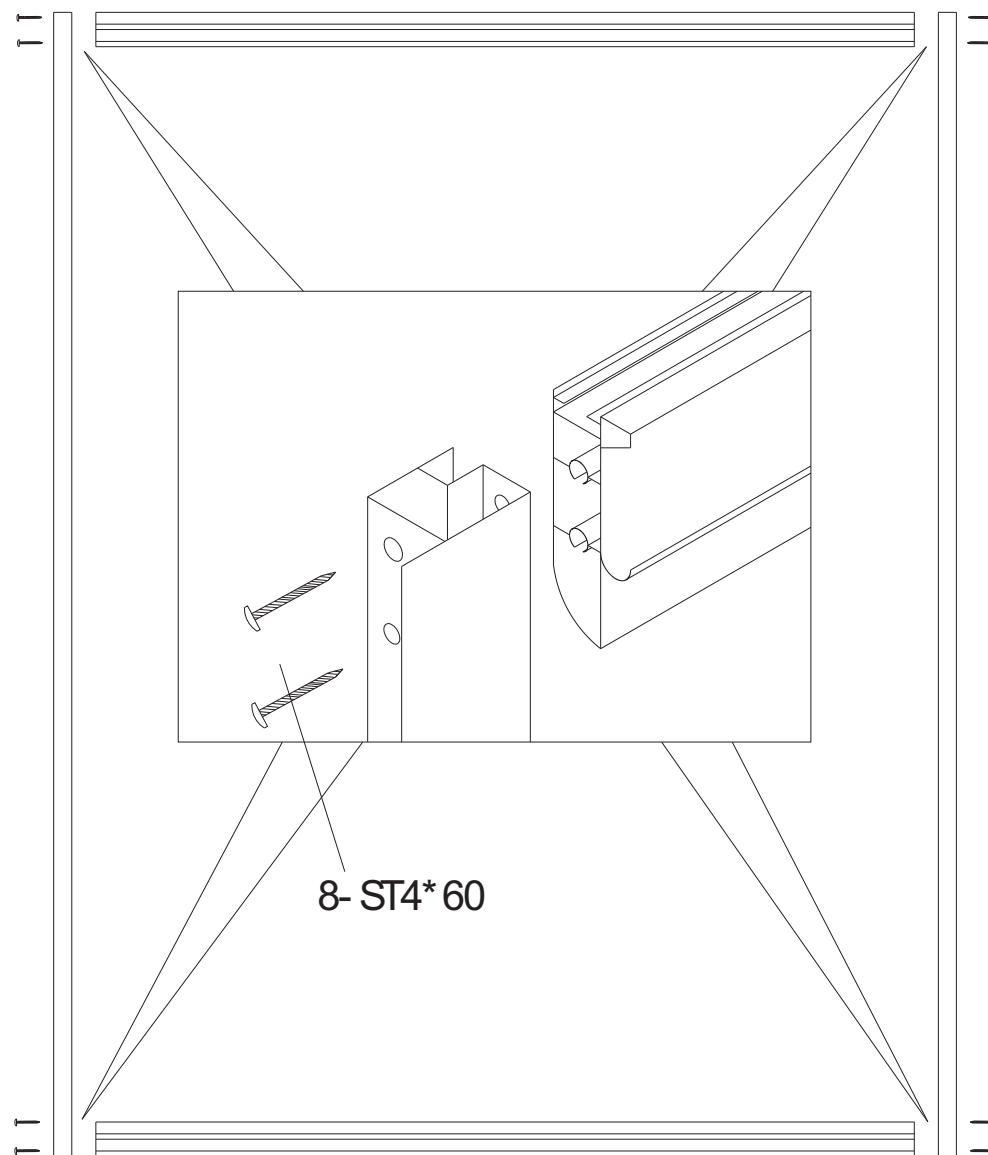


(2)

Put the belt on the glass and enter the glass to the aluminium profile with screws (4*12) fix the glass with fixer.

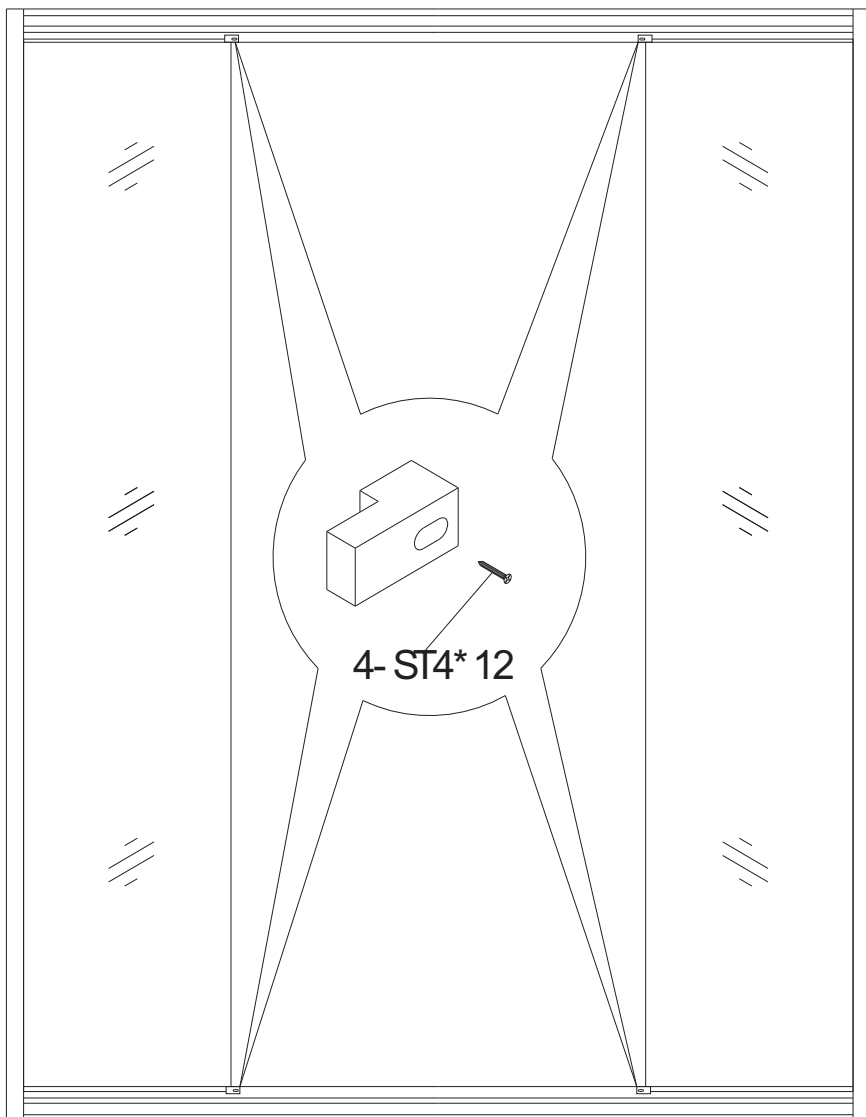


(3)

Put the top on the glass and tighten with screws (4*16).

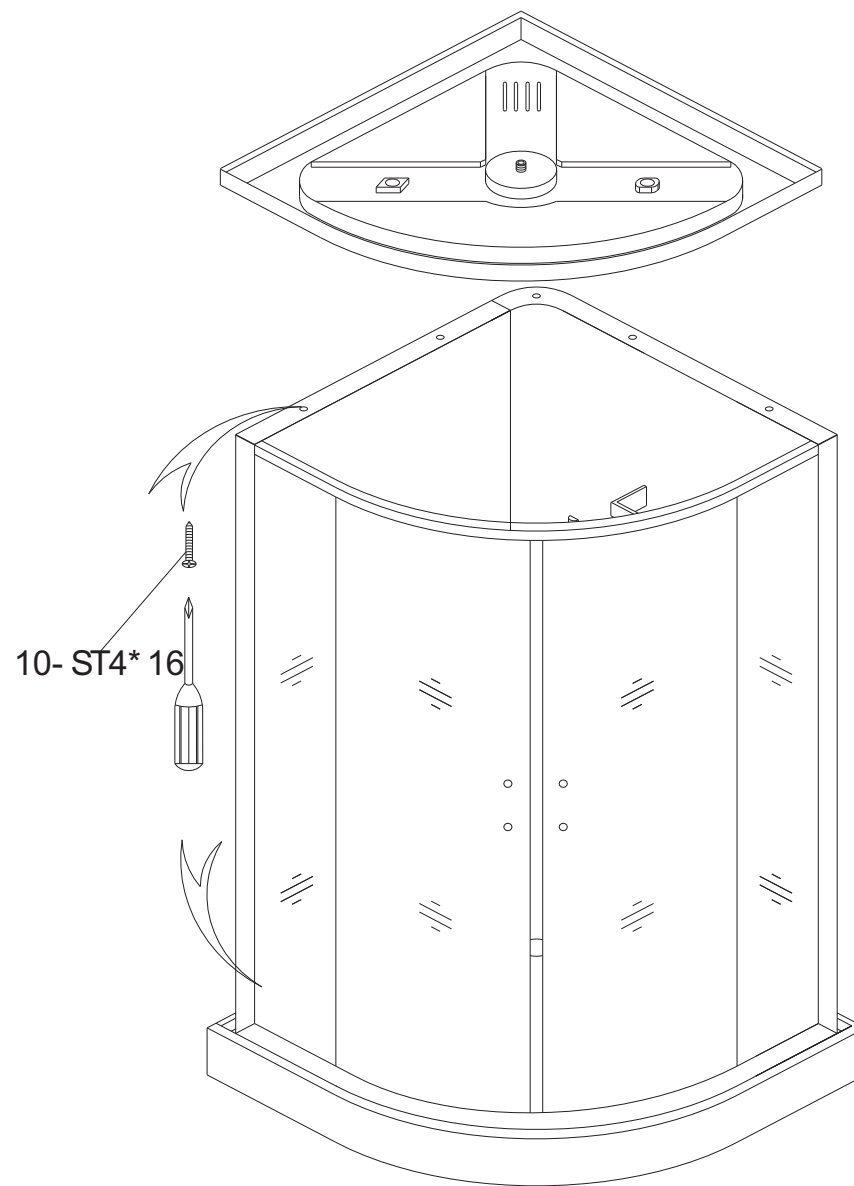


(8)

Put the installed glass door on the base. Then fix the glass and tray with screws (4*16)

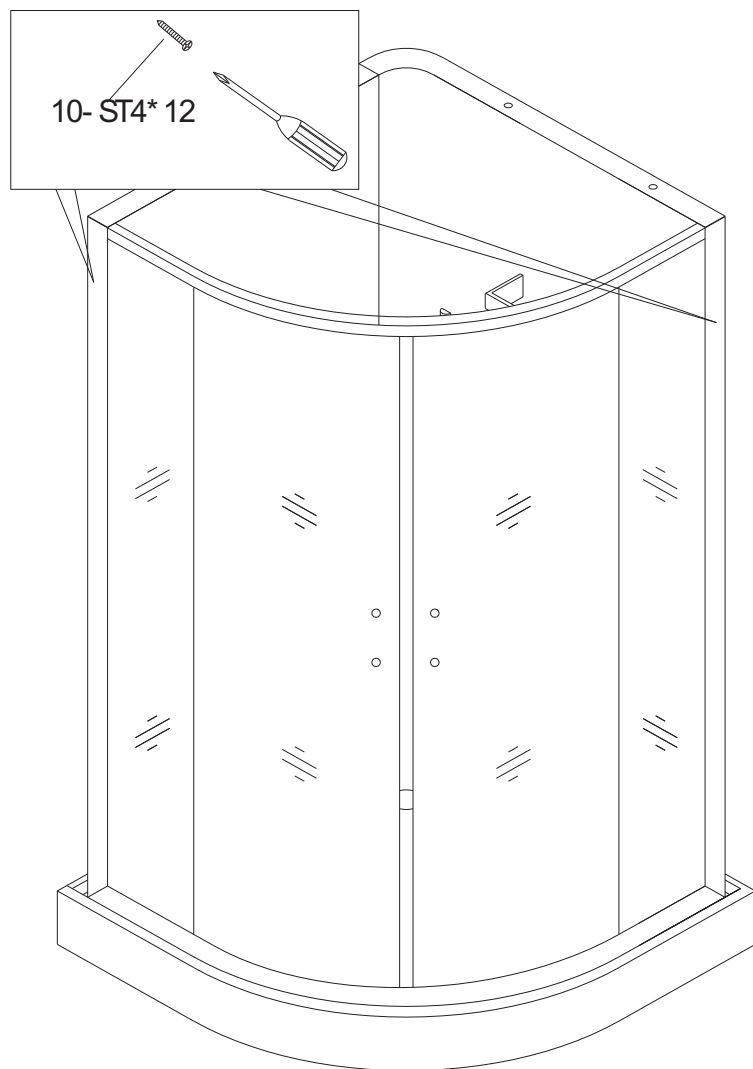


(7)

Install the top and bottom rollers as well as the door stopper and water proof belt.

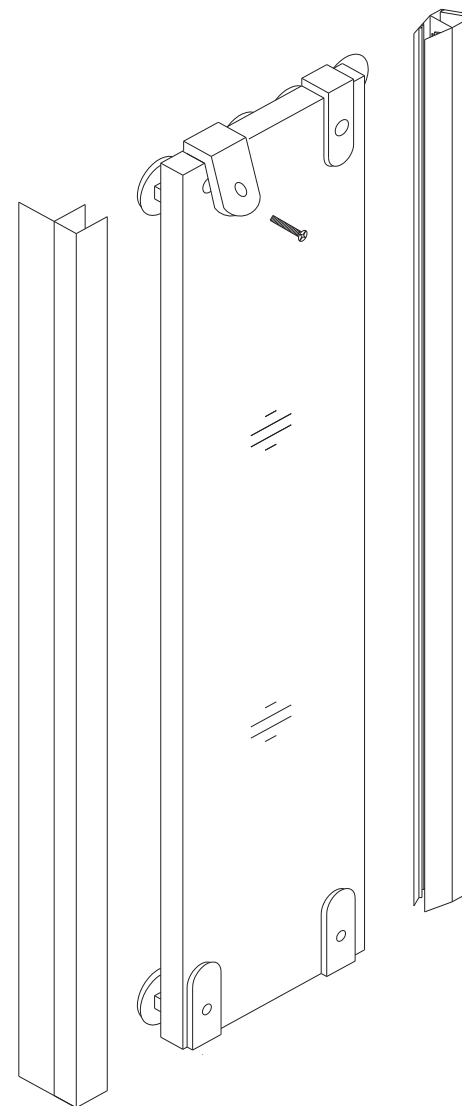


(4)

First enter the top rollers into the top bend rail. and then enter the adjust on bottom roller to the bend rail.

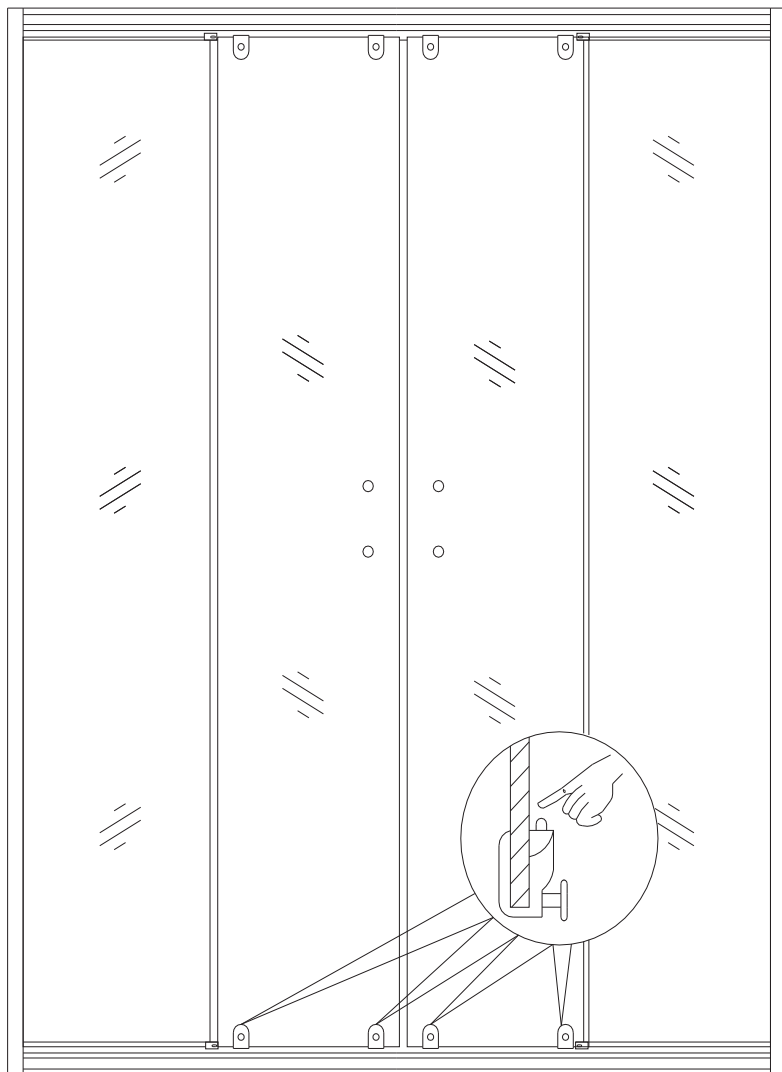

(5)

Fix the two backboard with screws (4*16)

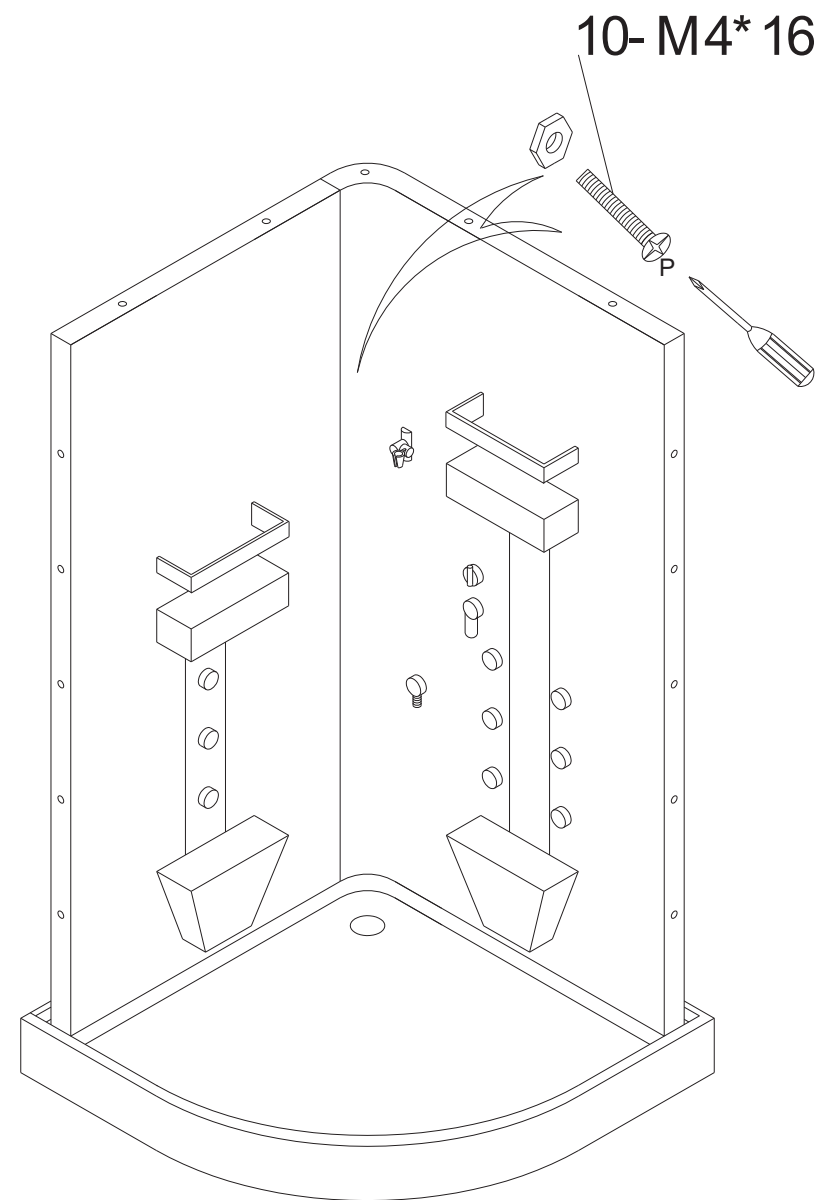

(6)